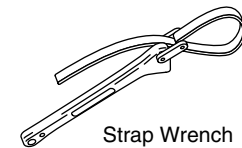


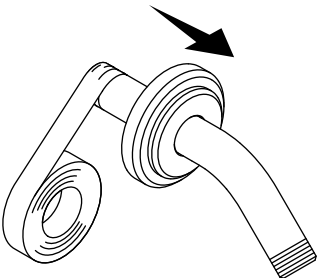
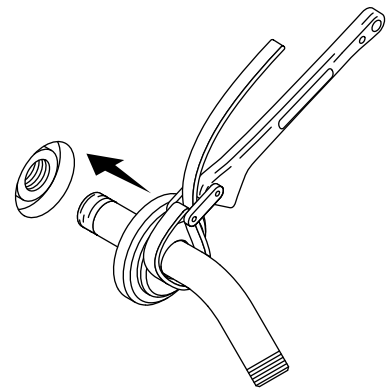
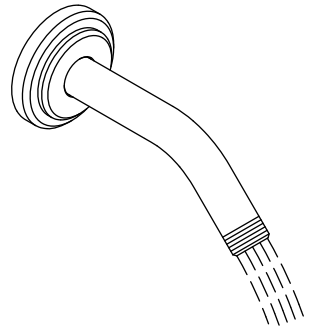
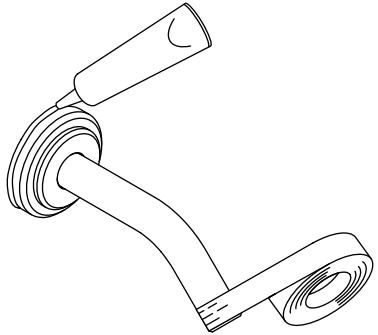
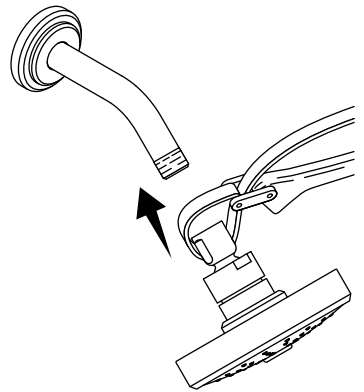
100% Silicone Sealant



Sealant Tape



Strap Wrench

<p>Record your model number.</p>	<p>⚠ CAUTION: Risk of product damage. To avoid plugging the showerhead spray outlets, use thread sealant tape on the shower arm threads. Do not use thread sealant compound (pipe dope).</p>	<p>⚠ CAUTION: Risk of scalding. KALLISTA low-flow showerheads are designed for use with compatible KALLISTA valves. When installing a low-flow product to an existing showering system, verify compatibility before showering. Do not use this KALLISTA low-flow product with a shower valve that allows the water temperature to become too hot when other plumbing products are used.</p>	<p>IMPORTANT INSTRUCTIONS Before using your shower, verify your new showerhead is compatible with your shower valve (located behind the wall) by performing the following steps:</p> <ul style="list-style-type: none"> • While standing outside the shower, turn on the shower valve. Do not step into the shower. • Adjust the water to your typical showering temperature. • Have someone flush the nearest toilet. • With your hand, carefully check the water temperature, from the showerhead while the toilet is refilling. • If the water becomes significantly hotter, you will need to either replace the shower valve with a compatible KALLISTA valve or return your showerhead. 	<p>NOTICE: Choose an automatic compensating valve with the appropriate minimum flow rating, to assure your valve will provide safety at the lowest flow rates. For a showerhead with a maximum flow rate of 1.75 gal/min (6.6 l/min), use with an automatic compensating valve rated 1.5 gal/min (5.7 l/min) or less.</p>	<p>Important Information Follow all local plumbing and building codes. Shut off the water supply.</p>
<p>1 Slide the wall plate onto the shower arm. Apply sealant tape.</p> 	<p>2 Install the arm. Tighten with a clean strap wrench.</p> 	<p>3 Slide the plate against the wall. Run water to flush debris.</p> 	<p>4 Apply 100% silicone sealant around the wall plate. Apply sealant tape to the arm.</p> 	<p>5 Use a clean strap wrench to secure the showerhead to the arm.</p> 	

Questions? Problems? For additional assistance, please contact KALLISTA's Customer Service Department at 1-888-4-KALLISTA (1-888-452-5547) or kallista.com.